



Experience multi-detail scoring  
with the first portable, real-time  
shot detection device.

**Charging the Wi-Fi hub  
and Camera's**

[www.eleyxshot.com](http://www.eleyxshot.com)


CONNECT WITH ELEY, CONNECT WITH THE WORLD®




1. Open your Wi-Fi hub and ensure all the Camera's are in a slot. Remove the charger from the Wi-Fi hub.



2. Unscrew the cap located on the back of the Wi-Fi hub. Connect the USB charging cable in to the slot. Connect the power supply to the mains supply.

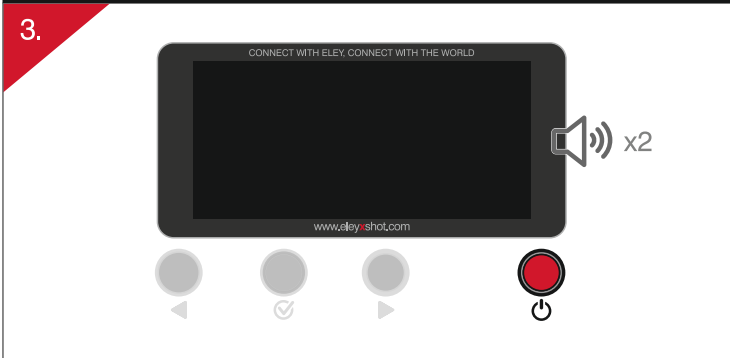

3. Press the red button to turn on the ELEY x-shot unit. Two beeps will sound when the unit is ready.

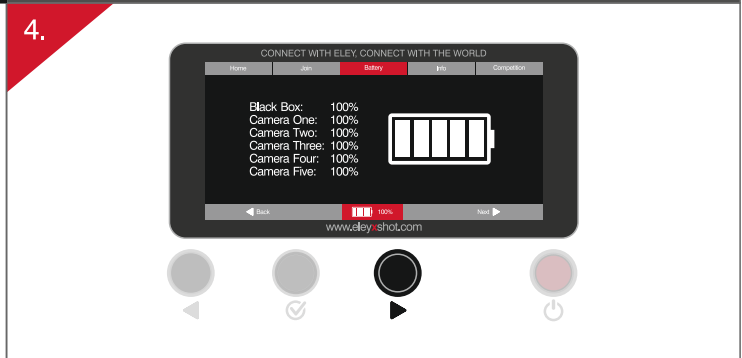


4. Press the right arrow and navigate to the "Battery" window. The Wi-Fi hub is described as "Black Box".


5. When the system is fully charged there is enough power for six hours of competition, a five camera recharge, followed by another 6 hours of competition.

When the Wi-Fi hub is turned off the camera will also power down to preserve the battery life even if the cameras are in or out of the charging slots.

 Battery life notice.

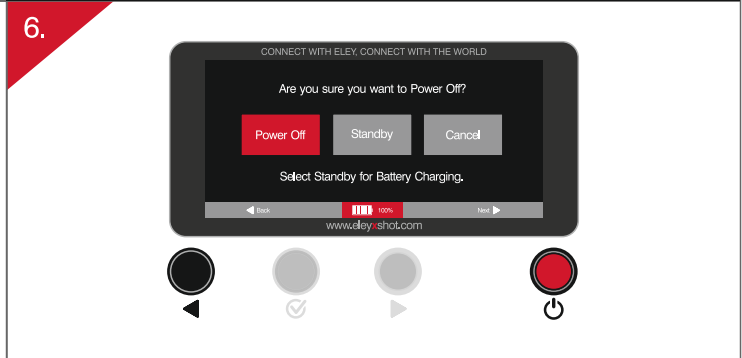

 6. Power down the Wi-Fi hub and camera's by pressing the red button and navigating to the Power Off button.

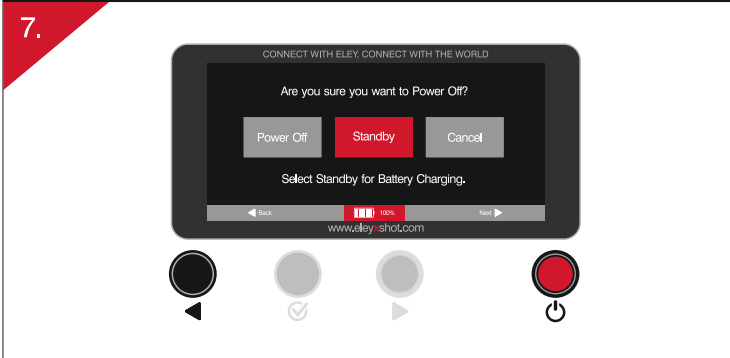

7. Standby mode: The system will turn off the Wi-Fi and other parts of the system. The Wi-Fi hub and camera's will remain charging.



8. The camera screen will show the charging logo only. To switch the system on or power it down press the red button and follow step 6.

Remember to disconnect your charging cable from the mains socket and replace your charger in the Wi-Fi hub.