




Experience multi-detail scoring
with the first portable, real-time
shot detection device.

Getting Started.


www.eleyxshot.com

CONNECT WITH ELEY, CONNECT WITH THE WORLD[®]

THANK YOU FOR CONNECTING WITH ELEY. INCLUDED WITH YOUR PURCHASE:

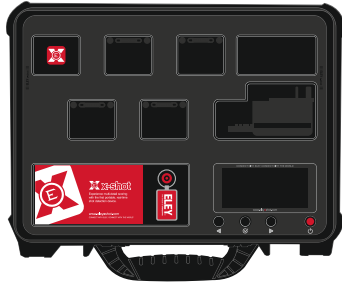

ELEY X-SHOT WI-FI HUB

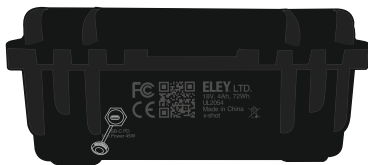

ELEY X-SHOT CAMERA









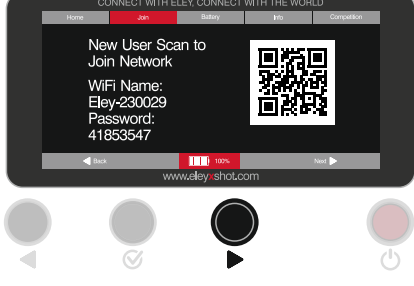

ELEY X-SHOT TARGETS



**ELEY X-SHOT CHARGER,
TRIPOD, AND SPACER**




**ELEY X-SHOT FREE APP
AND ACCOUNT**
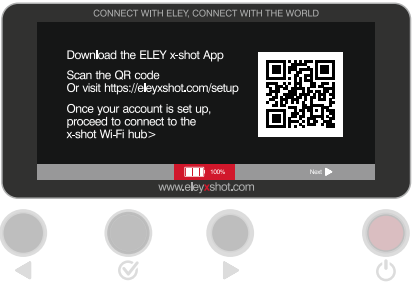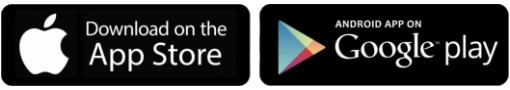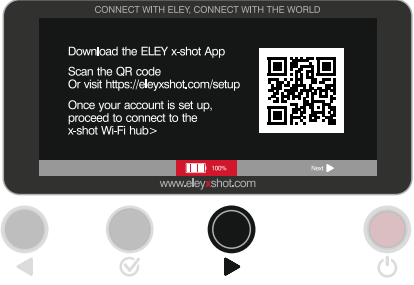
<p>1.</p> 	<p>2.</p> 
<p>Press the red button to turn on the ELEY x-shot unit. Two beeps will sound when the unit is ready.</p>	<p>Press the right arrow.</p>
<p>3.</p> 	<p>4.</p> 
<p>Scan the QR code to download the ELEY x-shot app. Or visit https://eleyxshot.com/setup</p>	<p>Download the app. Login or set up an account.</p>
<p>5.</p> 	<p>6.</p> 
<p>Link the user device to the ELEY x-shot Wi-Fi hub. Click the right arrow.</p>	<p>Scan the QR code. If your device does not have the QR scanner option, set up the device manually.</p>
<p>7.</p> 	<p>8.</p>  <p>When connected to the ELEY x-shot Wi-Fi hub, you may lose any other data connections through your device. Remember to connect back to your cellular service to upload or download information.</p>
<p>Click on the right arrow until you reach the “Join” window. You will find the x-shot device’s Wi-Fi name and password.</p>	<p>Connectivity notice.</p>



9. Click on the "Get Connected" button.

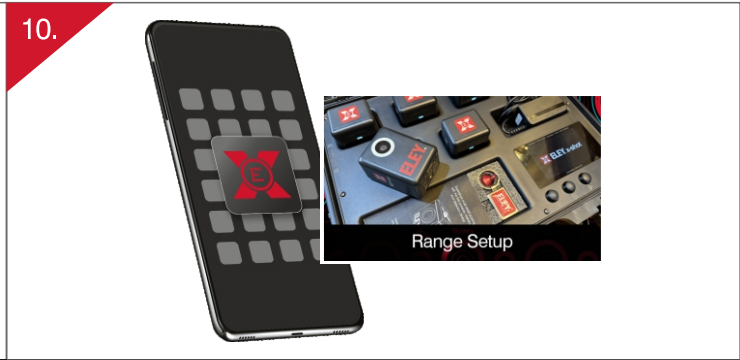

10. Click on the "Range Setup" button.




11. Once connected to your ELEY x-shot Wi-Fi hub, remove a camera unit from the box. Wait for the lane number to disappear.




12. Press and hold the "On" button located on the side of the camera until the screen illuminates.



13. Screw the ELEY tripod adaptor onto the camera. Gently screw the camera & tripod adaptor onto the tripod.

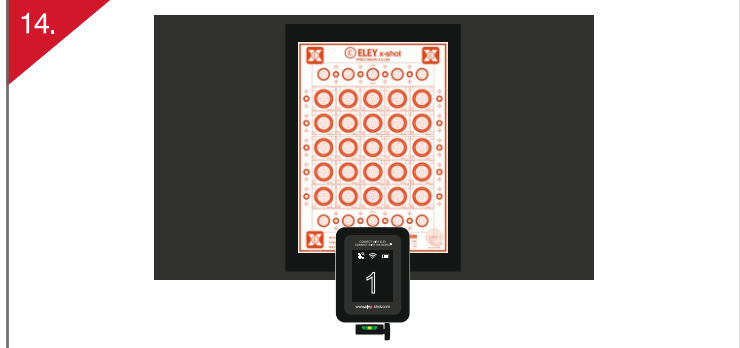

14. Secure the target on a matt black background. Position the camera in front of the target. Ensure there is one inch of black showing around the target.

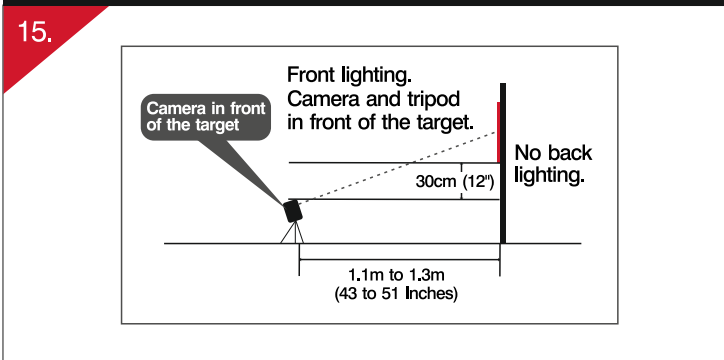


15. Camera positioning guide.

- 16.
1. Position the camera approximately 1.3 metres or 51" away from the target.
 2. Ensure the camera is no less than 35cm or 14" below the bottom of the target.
 3. An unobstructed solid matt black background must be placed behind the target, accompanied by adequate front lighting.
 4. Please ensure the target is centred in the camera alignment frame as illustrated below.


Camera positioning guide.




17. Select the camera you will be setting up. The camera display will change to setup mode.

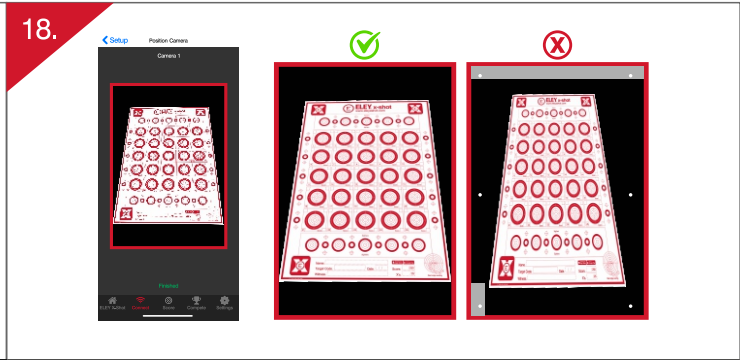


18. Position the camera in front of the target as illustrated in the above image.

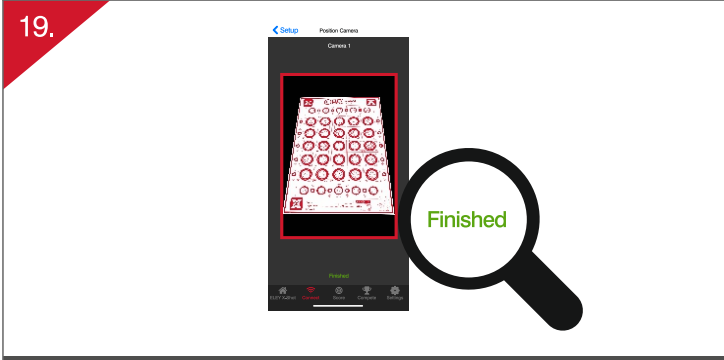


19. After positioning the camera, exit the screen by pressing the finished button.

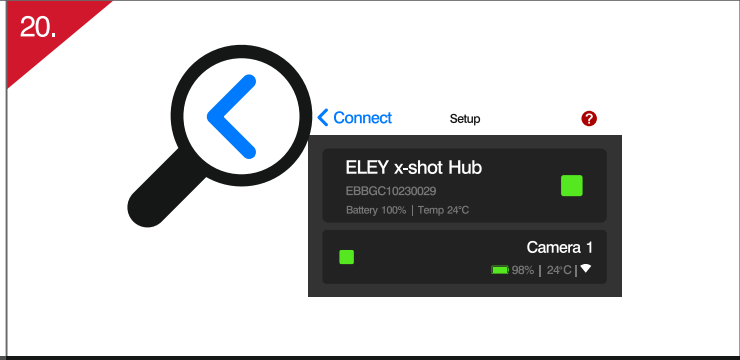


20. After the camera(s) are all set, exit the screen by clicking the arrow.

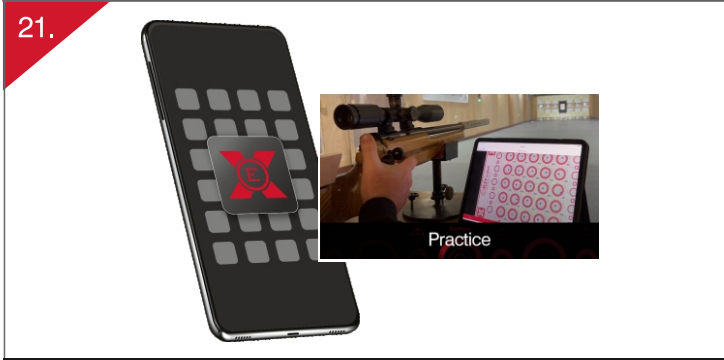


21. Click on the "Practice" button.

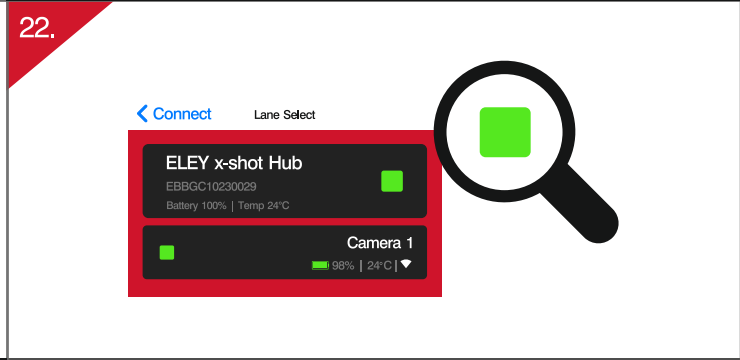

22. Select the camera/lane. Up to five different people can practice simultaneously. View and save your session.

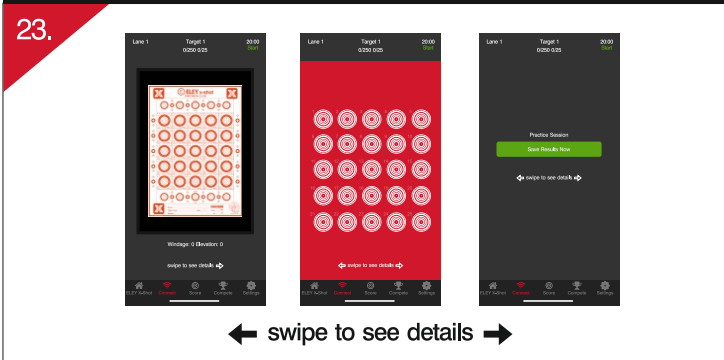


23. When the target appears, you can start shooting. Press the start button to monitor your time. Swipe right for additional information.

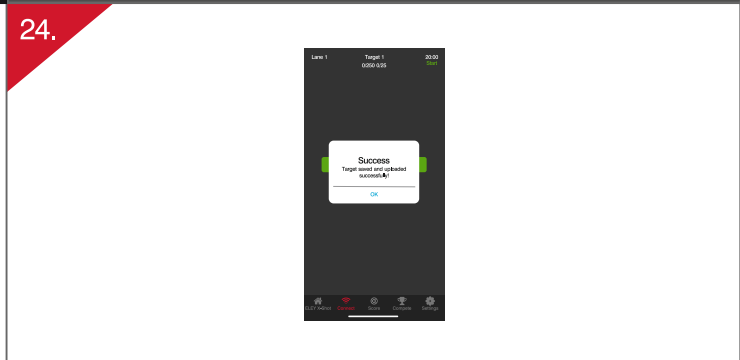

24. After completing your target, click on the "Save Results Now" button if you have a cellular connection and do not need to make any amendments to your score.

25.

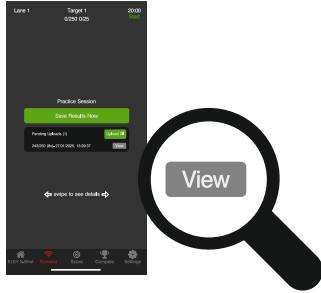


If you would like to make an amendment to your score click on the “View Button”.

26.



To make an adjustment to an individual score, click on the score you want to modify.

27.

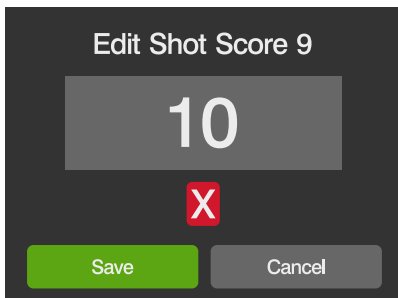


Enter the new score, if it is an X, click on the X. Click “Save”

28.




Any score manually amended will be highlighted in Red.

29.

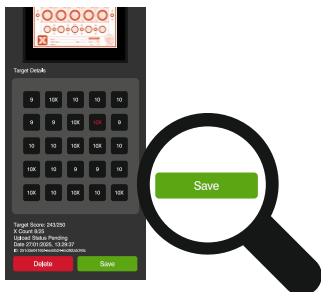


Press “Save” to validate the target.

30.

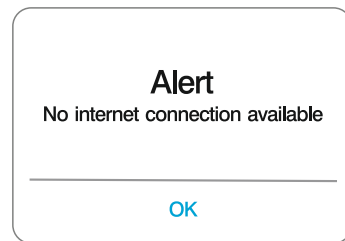

If you are not connected to a cellular network the following window will pop up. Press “OK” and close the app.

31.

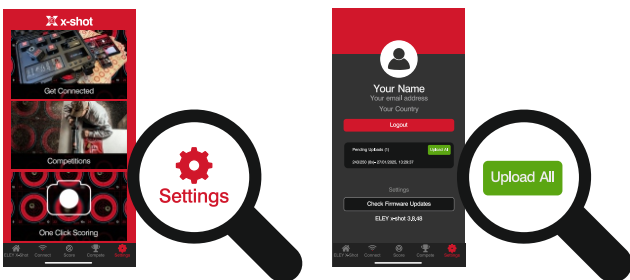


When you have access to a cellular network open the ELEY x-shot app, go to settings and press the “Upload all” button.

32.



To view your history of targets and scores, click on the “Performance Data” button on the ELEY x-shot app.


25.



View Targets

Click on the “View Targets Button” to see your latest target uploads.

26.

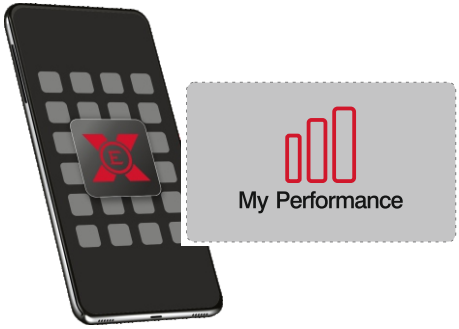






My Performance

Click on the “My Performance” button to see all your historic targets and scores by session date..

Icon meanings


27.



-  Camera connected to the x-shot Wi-Fi hub.
-  Camera Wi-Fi signal strength with the x-shot Wi-Fi hub.
-  Camera battery charge.
-  Camera number.

Camera screen display.


28.









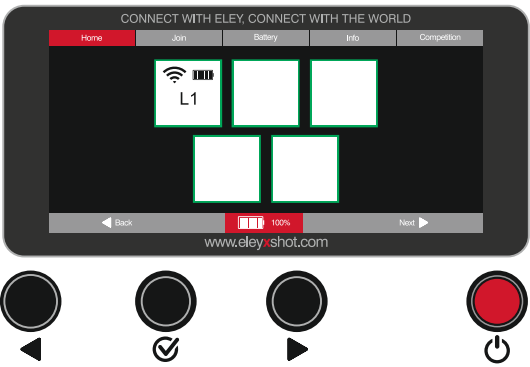

- CM ID: Unique camera number
- BB ID: x-shot unique ID to which the camera is connected.
- Version: Camera firmware version
- Temperature: Inside the camera
- FCC ID: FCC certification number
- IC ID: IC certification number

Click the side button again for further information.

29.



-  Menu item.
-  Camera
-  Camera Wi-Fi communication strength.
-  Camera battery charge.
-  x-shot Wi-Fi hub battery charge.
- L1 Lane One.
-  Scroll left or right
-  Select or enter button
-  Power mode button

ELEY WiFi hub display.