




Experience multi-detail scoring
with the first portable, real-time
shot detection device.

System reset

www.eleyxshot.com

CONNECT WITH ELEY, CONNECT WITH THE WORLD®


1.



You have two options with a System Reset:

1. Reset a Competition
2. Reset the Wi-Fi hub


2.

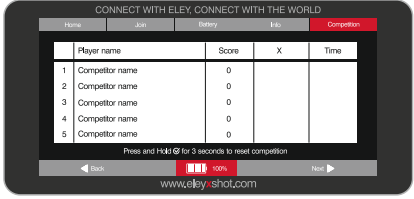


Reset system notice.

1. Reset a competition: Close the ELEY x-shot app on every user device connected to the hub. Navigate to the “Competition” window.

3.

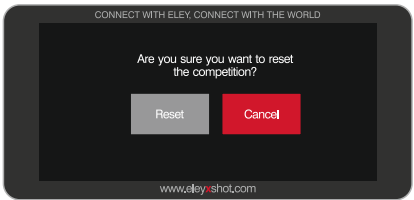


4.

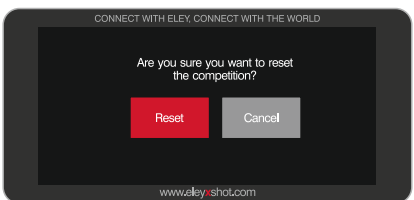


Press and hold the  button for 3 seconds until you see the next screen.

Click on the “Reset” button and press enter. The system will clear all the data.

5.




6.

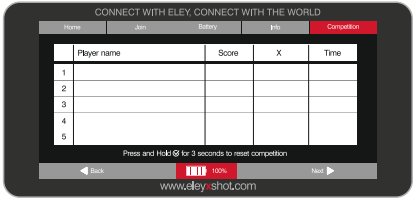


When the system is reset, the following message will appear. Press the enter button to clear the message.

The competition is now reset, and all the data cleared.


7.




8.




2. Reset the ELEY x-shot Wi-Fi hub to default settings: Close the ELEY x-shot app on every user device connected to the hub. Put all camera’s in their slot.


Navigate to the “Info” window. Press and hold the  button for 8 seconds until you see the next screen.

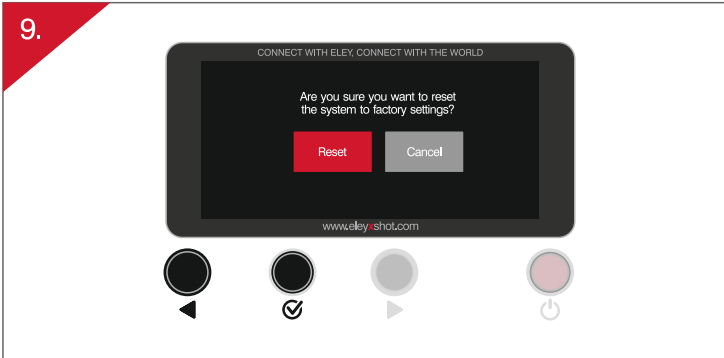


Click on the “Reset” button and press enter. The system will clear all the data and reset the Wi-Fi hub to factory setting and upload the new Wi-Fi settings in the camera.

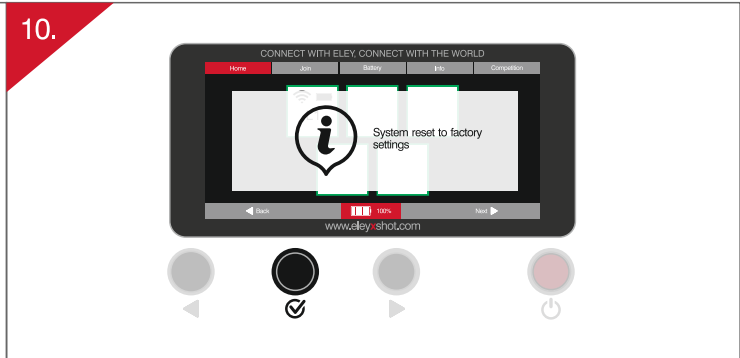


When the system is reset, the following message will appear. Press the enter button to clear the message.

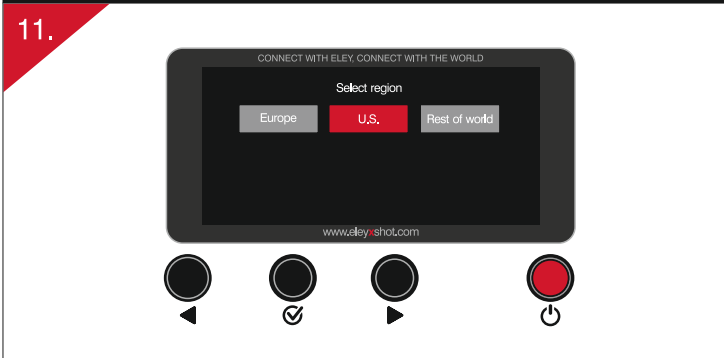


After a factory reset you will need to configure the region where the system will be used.

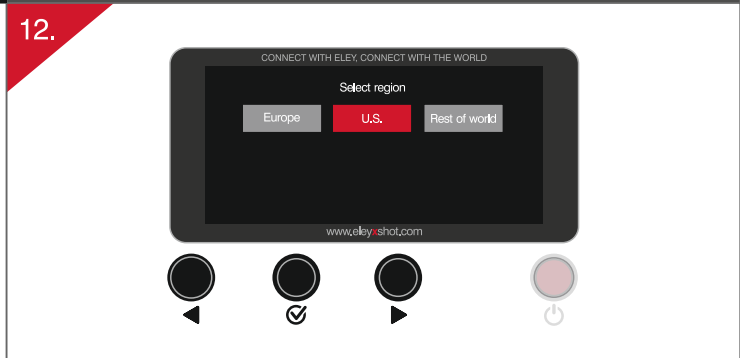

Navigate and select your region.

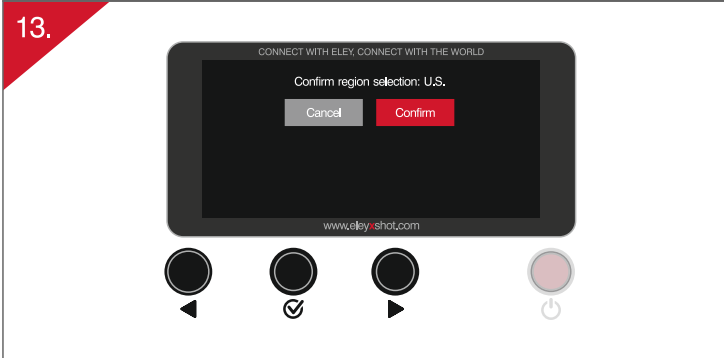

Navigate and confirm you choice of region. Press enter.

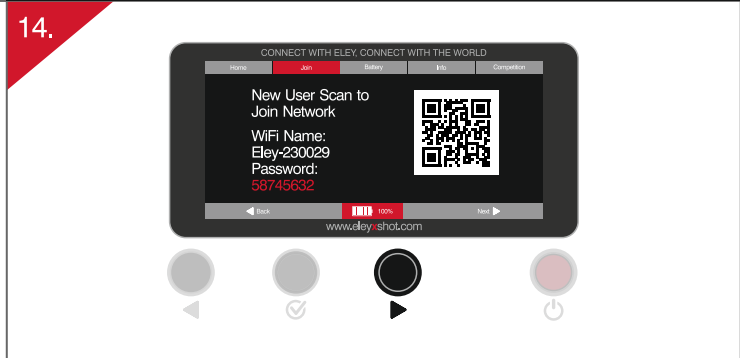

The “Join” screen will show a new password. You will need to join the ELEY x-shot Wi-Fi hub again as shown in the getting started document [Step 6].



Close the ELEY x-shot app and restart the connection process.